



Flying Fifteen Tuning Guide.

Contact Richard Lovering on richardlovering@hydesails.co.uk or 07802 315903.

Wind Speed	1-6 Knts	7-11Knts	12-16knts	17-21knts	22+knts
Mast Rake	24'11 (7595)	24'10 (7570)	24'9 (7540)	24'8 (7518)	24'7Knts
Rig Tension	22	25	27	27	25
Kicker	Slack	Tack Up Slack	On	Max	Max
Outhaul	Eased 10-15mm	Eased 5-10	Tight	Max	Max
Cunningham	No	No	No - take up slack	Medium	Max
Jib Luff	Wrinkles	Wrinkles	Just take out Wrinkles	No Wrinkles	Tight
Spreader Deflection	190mm to 210mm				
Spreader Length	422				
Mast Heel Position	Is 93mm from Centre of first keel bolt to aft of mast heel bolt. Assumes Keel position is standard.				

Mast Rake is measured by pull the tape measure up until you read 6248 at the top of the bottom black band then swung to the transom